


FILTROS DE VASO TRANSPARENTE / *TRANSPARENT GLASS FILTERS*

Permiten una inspección rápida del estado del elemento filtrante.

- Empleando cartuchos de polipropileno, el filtro actúa como separador de condensados, permitiendo ver los condensados que puedan provenir de arrastres en aspiración.
- Empleando cartuchos de papel plisado, el filtro puede emplearse como filtro de aspiración para vacío.

These filters let a quick inspection of the filtering element.

- *Using polypropilene cartridges, the filter can be used as condensation separator, allowing to see the condensation from suction drags.*
- *Using pleated paper cartridges, the filter can be used as a suction filter for vacuum.*

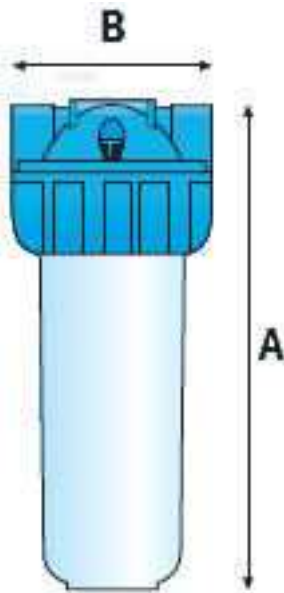

Modelo <i>Model</i> *	Conexión <i>Connection</i>	A	B	Elem filtrante <i>Filt. element</i>	Filtración <i>Filtration</i>	Caudal <i>Flow</i> (1)
	G	mm	mm		mcr	m3/h
FSC 05-01	1/2"	191	133	Polipropileno <i>Polypropylene</i>	25	30
FSC 05-02	3/4"					
FSC 05-03	1"					
FSC 10-01	1/2"	315	133			
FSC 10-02	3/4"					
FSC 10-03	1"					
FVT 05-01	1/2"	191	133	Papel plisado <i>Pleated paper</i>	25	30
FVT 05-02	3/4"					
FVT 05-03	1"					
FVT 10-01	1/2"	315	133			
FVT 10-01	3/4"					
FVT 10-01	1"					